

DIY Guide for Spacefolds

What you will need

- Electric screw driver
- Spirit level
- Silicone lubricant spray
- Pencil

Step 1

Unpack door and lay flat on the floor



Step 2

Check track fit



Step 3


Spray silicone lubricant into track

Step 4

Slide the trolleys onto the track

Step 5

Lift door into place and screw track with 32x8 square head screws

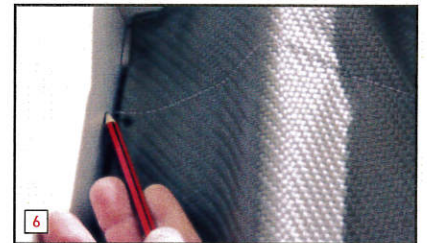


Step 6

Close door and mark the heights of the fixing holes

Step 7

Mark plumb line from centre of track and at fixing hole heights

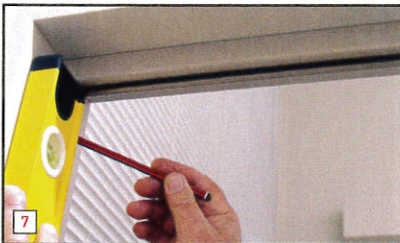

Step 8

Screw end fixings onto plumb line at height marks with 32x8 square head screws

Step 9

Screw through fixing holes into fixings with 19x4 screws



Step 10

Hang catch onto hook, close door and mark for height

Step 11

Mark plumb line from centre of track and fix catch



Step 12

Fix end post into place using 20x6 round head screws.